


Retractable Bow(HB/PT Series) & Fixed Stern Joystick Programming Instructions


Note: For single joysticks see separate programming instructions

Note: Once initiated, the programming sequence below must be completed within two minutes

1. Remove the four-prong and six-prong connectors from any existing receiver. Remove the power connector from any existing joystick. Wait 20 seconds.
2. Plug the four-prong connectors back into both receivers and the six prong connector into the actuator receiver
 - (a) The receiver should blink red
3. Simultaneously hold the **front (bow)** joystick toggle switch to the right and plug in the black and red power connector to the back of the joystick
 - (a) The joystick should beep three times
4. Let go of the toggle switch
5. Push the **front (bow)** toggle switch to the right again and hold it. While holding the toggle switch to the right, press the  button on the joystick membrane
 - (a) The joystick should beep once, and shut off

Note: For installations with two separate helm-mounted joysticks (upper and lower stations) – Once the first joystick is programmed per above instructions leave it plugged into power but turned off, and repeat steps 3-5 with second joystick

PROGRAMMING THE KEY FOB

1. Turn the joystick back on by pressing the  button
 - (a) The joystick should beep, and a solid blue light will appear on the joystick membrane
 - (b) Hold the *top* two buttons down simultaneously on the key fob until you hear a beep (around 5 seconds)
2. Test the thruster with the joystick and the key fob